

## **Effect of Steam Curing on Shrinkage of Concrete Piles with Silica Fume**

**N. Yazdani<sup>1</sup>, M. Filsaime<sup>2</sup> and T. Manzur<sup>3</sup>**

<sup>1</sup>Professor and Chairman, Department of Civil Engineering, University of Texas at Arlington, Box 19308. 425 Nedderman Hall, Arlington, TX 76019-0308. Phone: 817-272-5055, FAX: 817-272-0661, E-mail: <[yazdani@uta.edu](mailto:yazdani@uta.edu)> <sup>2</sup>Civil Engineer, PBS&J, 5300 West Cypress Street, Suite 200, Tampa, Florida 33607, Phone: (813) 282-7275 Fax: (813) 282-9767 <sup>3</sup>Research Assistant, Department of Civil Engineering, University of Texas at Arlington, Box 19308. 425 Nedderman Hall, Arlington, TX 76019-0308. Phone: 817-272-3608, FAX: 817-272-2630, E-mail: <[tanvir.manzur@uta.edu](mailto:tanvir.manzur@uta.edu)>

### **ABSTRACT**

Silica fume is a common addition to high performance concrete mix designs. The use of silica fume in concrete leads to increased water demand. For this reason, Florida Department of Transportation (FDOT) allows only a 72-hour continuous moist cure process for concrete containing silica fume. Accelerated curing has been shown to be effective in producing high-performance characteristics at early ages in silica-fume concrete. However, the heat greatly increases the moisture loss from exposed surfaces, which may cause shrinkage problems. An experimental study was undertaken to determine the feasibility of steam curing of FDOT concrete with silica fume in order to reduce precast turnaround time. Various steam curing durations were utilized with full-scale precast prestressed pile specimens. The concrete compressive strength and shrinkage were determined for various durations of steam curing. Results indicate that steam cured silica fume concrete met all FDOT requirements for the 12, 18 and 24 hours of curing periods. No shrinkage cracking was observed in any samples up to one year age. It was recommended that FDOT allow the 12 hour steam curing for concrete with silica fume.

### **INTRODUCTION**

Silica fume is a byproduct in the production of silicon metal or ferrosilicon alloys. Silica fume for use in concrete is available in slurry or dry forms [ACI 1997]. In either form, silica fume is a very reactive pozzolan when used in concrete due to its fine particles, large surface area, and the high silicon dioxide content. In fresh concrete, silica fume affects the water demand and slump. The concrete water demand increases with the increased amounts of silica fume, due primarily to the high surface area of the silica fume [Scali et al. 1987]. Fresh concrete containing silica fume is more cohesive and less prone to segregation than concrete without silica fume [ACI 1997]. Since silica fume is used with other admixtures, such as water-reducing or high-range water-reducing admixtures, the slump loss is actually due to the change in chemical reactions. Silica fume is also known to affect the time of setting and bleeding of fresh concrete. Mechanical properties of silica fume concrete, such as creep and drying shrinkage, have been known to be lower than that of concrete without silica fume

[ACI 1997]. At 28 days, the compressive strength of silica fume concrete is significantly higher than concrete without silica fume. Silica fume is also linked to the decrease of permeability, chemical attack resistance, and enhancement of the chloride ion penetration resistance of concrete [ACI 1997]. The surface of silica fume concrete tends to dry quickly, subsequently causing shrinkage and cracking prior to final setting. This is one reason why early-age moist curing of silica fume-concrete is important [Ozyildirim 1991].

One form of curing that has become popular at precast prestressed concrete plants is accelerated curing. This type of curing is advantageous where early strength gain in concrete is important or where additional heat is required to accomplish hydration, as in cold weather [CAC 2004]. Accelerated curing reduces costs and curing time in the production of precast members resulting in economic benefits [Theland 2003]. A primary concern with accelerated curing is the potential for increased moisture loss during the curing process, as mentioned in ACI 517.2R [ACI 1992]. Another concern is the possible detrimental effect on long-term concrete properties from high temperatures. Some problems in strength gain have been noted in precast silica fume concrete members cured under accelerated conditions (Holland 1989). Accelerated curing has been shown to be effective in producing high-performance characteristics at early ages in silica fume concrete [PCI 1994]. Prolonged curing of silica fume concrete has been recommended to ensure optimum results. The Precast/Prestressed Concrete Institute (PCI) specifically recommends over curing high-performance concrete that contains silica fume [PCI 1994]. There has also been a tendency to be on the safe side, since the body of knowledge on how to cure silica fume concrete most effectively and efficiently is limited [Ayers and Khan 1994].


The Florida Department of Transportation (FDOT) Standard Specifications 346 allows the use of silica fume in concrete as 7 to 9% replacement of cementitious material [FDOT 2004]. The silica fume must meet the requirements of ASTM C 1240 specifications (ASTM 2003). FDOT Specifications 450-10.8 modifications, effective January 2004, specify extended moist curing requirements for silica fume concrete. Immediately after finishing, curing blankets must be applied to all exposed surfaces and saturated with water. The moist curing must continue for a minimum of three days. Immediately afterwards, two coats of curing compound must be applied and the surfaces kept undisturbed thereafter for a minimum of seven days. Although not allowed by FDOT, the process may be sped up through employing accelerated curing techniques. ASTM C-684 accelerated curing methods involving elevated temperature water use or high temperature and pressure method are not convenient for large precast prestressed elements [ASTM 1999]. However, use of steam curing for silica fume concrete is convenient, and would mean significant economic savings and convenience for precasters. With a maximum probable steam curing time of 24 hours, the precast concrete products could be turned around at a significantly faster rate, resulting in economic benefits.

The objective of this study was to verify the feasibility of steam curing of FDOT concrete with silica fume. The effect of such curing on several desired properties of hardened concrete were also investigated.

## **STEAM CURING**

Two methods of steam curing are used: live steam at atmospheric pressure (for enclosed cast-in-place structures and large precast concrete units) and high-pressure steam in autoclaves (for small manufactured units). A steam-curing cycle, as shown in Fig. 1, consists of (1) an initial delay prior to steaming, (2) a period for increasing the temperature, (3) a period for holding the maximum temperature constant, and (4) a period for decreasing the temperature [Kosmatka and Panarese 1999].

The desired maximum temperature within the enclosure and the concrete is approximately 66°C (150°F). It has been shown that strength will not increase significantly if the maximum steam temperature is raised from 66°C (150°F) to 79°C (175°F). Steam temperatures above 82°C (180°F) should be avoided because of wasted energy and potential reduction in ultimate concrete strength. The advantage of steam curing around 66°C (150°F) is the potential reduction of concrete drying shrinkage and creep. Temperatures in the enclosure surrounding the concrete should not be increased or decreased more than 4°C (40°F) to 16°C (60°F) per hour.

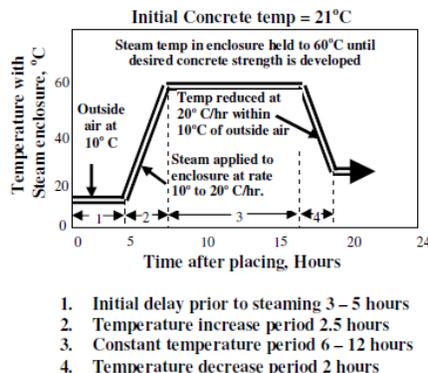

**FIGURE 1 A Typical Atmospheric Steam Curing Cycle**  
(<http://www.cement.ca/cement.nsf>)

## PILE SAMPLE PROCUREMENT

Full-scale precast prestressed pile specimens were monitored for shrinkage behavior under ambient conditions. The pile samples were obtained from Gulf Coast Prestress, Inc (GCP) located at Pass Christian, Mississippi. A total of 8 full-scale prestressed piles, cast and cured at GCP, were obtained in October 2003. They included 4 – 356 mm x 356 mm x 1.83 m (14 in x 14 in x 6 ft) and 4 – 610 mm x 610 mm x 1.83 m (24 in x 24 in x 6 ft) piles. The 14-in. square piles contained 8 - ½-in. diameter strands, and the 24 in. piles contained 16 - 1/2in diameter strands. Also obtained were 152.4 mm x 304.8 mm (6 in. x 12 in.) cylindrical specimens for compressive strength determination.

## MIX DESIGN

The concrete mix design used was an FDOT Class V (Special) mix design with silica fume (Table 1), issued in 1995. The FDOT Class V (Special) mixes are primarily intended for use in structures requiring high performance concrete, such as piles. A Type II Portland cement, conforming to AASHTO M-85 specifications was utilized in this mix design. The mix design involved two mineral admixtures, densified silica fume and Class F fly ash. The chemical admixtures used in the chosen mix were an air entrainer conforming to AASHTO M-154, Type D retarder conforming to AASHTO M-194, and Type F water reducer conforming to ASTM C 494. The coarse and fine aggregates were Grade 67 Brooksville lime rock from Brooksville, FL, and silica sand from Chattahoochee, FL, respectively. The coarse aggregate, Gradation #67 river gravel, had a specific gravity of 2.52. The fine aggregate, silica sand with a fineness modulus of 2.57, had a specific gravity of 2.62.

## TEST MATRIX

The test matrix (Table 2) yielded four mix combinations for each steam curing time frames and control curing; steam curing for 12, 18, 24 hours and moist curing. The precast industry

typically uses a curing duration of about 10 – 18 hours as current practice. The steam curing method nomenclature used herein contains 4 characters. The first two characters represent the steam curing duration in hours. The third letter designates the fact that the specimens were steam cured, and the fourth letter represents the curing method used for the balance of the 72-hour total continuous curing requirement [FDOT 2004]. The control non-steam moist cured specimens are designated as “MC.”

**TABLE 1 Concrete Mix Design**

<b>Class Concrete: V Special 41 MPa (6000 psi)</b>	
Parameter and Properties	Value
Cement kg (lbs)	251 (553)
Coarse Agg. Kg (lbs)	798 (1760)
Fine Agg. Kg (lbs)	488 (1075)
Air Entr. Admix mL (oz)	166 (5.6)
1 <sup>st</sup> Admixture mL (oz)	444 (15.0)
2 <sup>nd</sup> Admixture mL (oz)	1334 (45.1)
3 <sup>rd</sup> Admixture mL (oz)	43976 (1487.0)
Water kg (lbs)	87 (195.5)
Fly Ash	61 (135)
Slump Range	140 to 216 (5.5 to 8.5) mm (in)
Air Content	1.0 % to 5.0 %
Unit Weight (wet)	2275 (142) kg/m <sup>3</sup> (pcf)
W/C Ratio (Plant)	0.35 kg/kg (lbs/lb)
W/C Ratio (Field)	0.35 kg/kg (lbs/lb)
Theo Yield	0.78 m <sup>3</sup> (ft <sup>3</sup> )
<b>Producer Test Data</b>	
Parameter and Properties	Value
Chloride Cont	0.002 (0.221) kg/m <sup>3</sup> (pcf)
Slump	152.4 (6.0) mm (in)
Air Content	2.75 %
Temperature	38 (100) Degree C (F)
Compressive Strength MPa (psi)	28-Day-61 (8870)

**TABLE 2 Test Matrix**

<b>Curing* Method</b>	<b>Specimens</b>		
	<b>Cylinders</b>	<b>Piles</b>	
<b>Test</b>	<b>152 mm x 305 mm (6 in. x 12 in.)</b>	<b>355 mm x 355 mm (14 in. x 14 in.)</b>	<b>610 mm x 610 mm (24 in. x 24 in.)</b>
12SM	9	1	1
18SM	9	1	1
24SM	9	1	1
MC (control)	9	1	1
<b>Total</b>	<b>36</b>	<b>4</b>	<b>4</b>
*12SM: 12 hr. steam + 60 hr. moist *18SM: 18 hr. steam + 54 hr. moist *24SM: 24 hr. steam + 48 hr. moist *MC: 72 hr moist cure			

## **FDOT ACCELERATED CURING SPECIFICATIONS**

FDOT Specification 450-10.7 contains the requirements for accelerated curing of prestressed members, and is used for non-prestressed members also [FDOT 2004]. FDOT specifications provide separate temperature requirements for the steam curing when the ambient temperature is above or below 10° C (50° F). During this study, since the ambient temperature was always above 10° C (50° F) during the time of mixing and curing, only the specifications for the higher temperature is mentioned herein. The initial set period of the concrete was determined herein using ASTM C 403 procedures [ASTM 1999]. The FDOT specification also states that during the application of heat, the temperature rise in the concrete should not exceed 20° C (36° F) per hour. The maximum curing temperatures of the enclosure and concrete must not exceed 71° C (160° F). The maximum curing temperature has to be uniformly maintained throughout the enclosure, with variation of no more than 11° C (20° F) from the maximum peak temperature until the concrete reaches the required release strength. The concrete should be allowed to cool gradually at the maximum cooling rate of 27.8° C (50° F) per hour. The cooling rate needs to be continued until the concrete temperature is 22° C (40° F) or less than the ambient temperature outside the curing enclosure. If accelerated curing is completed before the minimum specified curing period of 72 hours has elapsed, curing needs to be continued for the remaining part of the curing period in accordance with one of the following curing methods: continuous moisture, membrane curing compound, or curing blankets.

## **CONCRETE MIXING, CASTING AND CURING**

The absorption, moisture content, and the set time of the concrete were determined to adhere to all specifications. Three embedded sets of two metal plates were placed near the ends and at the middle of each pile. The two plates in each set were spaced approximately 254 mm (10 in.) apart. The external end plate was placed approximately 75 mm (3 in.) from the pile end, as shown in Fig. 2. At GCP, thermocouples were inserted into the specimens and connected to a data logger for continuous temperature monitoring (Fig. 3). Two sets of thermocouples were placed at the center of the piles before casting. After the initial set time, the 12SM, 18SM, and 24SM specimens were steam cured using low pressure steam pipes, for the proper curing times of 12, 18, or 24 hours, and then moist cured for 60, 54, and 48 hours, respectively, for the completion of the 72 hour total continuous curing period. The MC samples were moist cured for the entire 72-hour period. The piles were covered with burlap, which provided enclosure during the steam curing cycle. The temperatures of the specimens were monitored using the OMCP-10-TEMP thermal data logger.



**FIGURE 2** Cylinders and Finished Piles with Embedded Shrinkage Plates

## PLASTIC PROPERTY OF FRESH CONCRETE

After mixing, a portion of the concrete was placed in a damp mixing pan and the plastic properties of the fresh concrete were determined. The tests performed were slump [ASTM 2003], temperature [ASTM 1999], and air content using the ASTM Pressure Method [ASTM 2003]. Table 3 presents the determined plastics properties. The acceptable ranges for the plastic properties were as follows: slump range 140 – 216 mm (5.50 – 8.50 in) and air content 1.0 – 5.0 %. Table 3 shows that all 4 mixes satisfied the FDOT mix design plastic property requirements.



**FIGURE 3 Thermocouple Wires for Concrete Piles**

**TABLE 3 Plastic Property Results**

<b>Curing Type</b>	<b>Slump, mm (in)</b>	<b>Air Content, %</b>	<b>Temperature, ° C (° F)</b>
12SM	121 (4.75)	2.1	30 (86)
18SM			
24SM			
MC (control)			
*12SM: 12 hr. steam + 60 hr. moist *18SM: 18 hr. steam + 54 hr. moist *24SM: 24 hr. steam + 48 hr. moist *MC: 72 hr moist cure			

## STEAM CURING

The temperature readings described in this section reflect the average temperature during the steam curing. Fig. 4 displays the temperature of the concrete specimens during periods 2 and 3 of the steam curing cycle, as described in Fig. 1. Channels 1 and 2 correspond to the temperature in the 610mm (24 in.) specimens, and Channels 3 and 4 correspond to the 356mm (14 in.) specimens. Approximately a 10° C (50° F) temperature difference existed in the maximum curing temperatures for the two pile groups. This may be due to the size effect and specimen location during curing. However, it is obvious that the GCP pile specimen steam curing temperature cycles satisfied the FDOT requirements.

## COMPRESSIVE STRENGTH TEST

The compressive strength test was performed in accordance with ASTM C 39 [ASTM 2003]. The compressive strength results are presented in Fig. 5. All samples reached the target compressive strength of 41 MPa (6000 psi) at 28 days, and they continued to gain strength beyond 28 days. The 12SM specimens were the highest strength producers among the steam cured specimens at 365 days, followed by the 18SM samples, as shown in Fig. 5. The moist cured MC specimens displayed high compressive strengths at 28 days and consistently at all other ages. At 91-days, the 12SM samples displayed the second highest compressive strengths, followed by the 24SM specimens. The 18SM specimens displayed the least compressive strength.

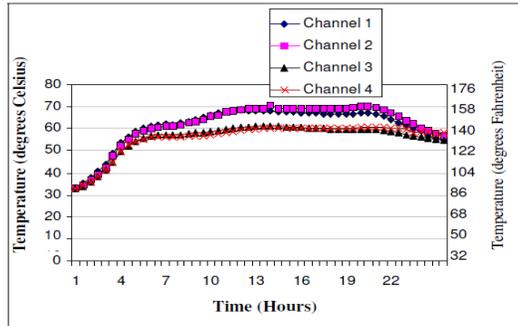


FIGURE 4 Steam Curing Temperatures

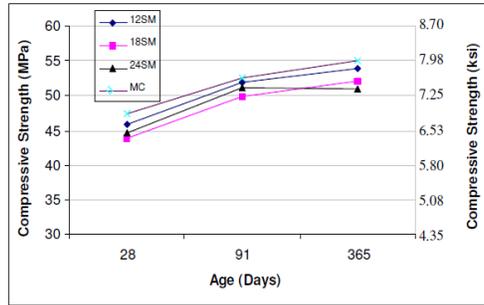


FIGURE 5 Compressive Strength Results

## SHRINKAGE TEST

The outside distances between the pairs of embedded steel plates were measured weekly with a micrometer (Figs. 6 and 7). A total of 3 readings were taken from each pair of shrinkage plates, and the average of the three readings was recorded as the gage length ( $L_x$ ). It was also not possible to immerse the large pile samples continuously in lime solutions, as specified by ASTM C 490. As described in Section 2.2, when the ambient humidity is greater than 40%, a correction factor is applied to the actual shrinkage of the concrete. The net shrinkage after humidity corrections was obtained as follows:

$$(\epsilon_{sh})_{net} = (\epsilon_{sh})_t * (CF)_H \quad (1)$$

For conditions other than the standard 40% ambient humidity, a correction factor (CF) is applied as follows:

$$(CF)_H = 1.40 - 0.010H, 40 \leq H \leq 80\% \quad (2)$$

$$(CF)_H = 3.00 - 0.030H, H \geq 80\% \quad (3)$$

where H is the relative humidity in percent (Nawy 2009).

Equation 4 was then used to calculate the shrinkage occurring on the pile surface, as follows:

$$L = \frac{L_x - L_i}{L_i} \quad (4)$$

where:  $L$  = shrinkage at age  $x$

$L_x$  = micrometer reading at age  $x$

$L_i$  = initial micrometer reading at the time of removal from mold

Sample graphical representations of the modified shrinkage and best-fit regression trendlines for the small and large pile specimens are shown in Figs. 8 and 9, respectively. The least amount of shrinkage occurred in the moist cured specimens for both the small and large pile specimens at 350 days. Among the steam cured specimens, the least shrinkage occurred within the 18SM specimens followed by the 12SM specimens for the small piles. The greatest amount shrinkage occurred within the 24SM samples. For the larger piles, the moist cured samples again performed best for shrinkage at 350 days, followed in order by the 24SM, 12SM, and 18SM samples, respectively.

### SIZE EFFECT ON SHRINKAGE

The shrinkage growth for the small and large 12SM specimens were similar, with the larger shrinkage occurring within the smaller specimens. The small and large 18SM pile specimens show more difference in shrinkage growth, with the greater amount of shrinkage occurring within the larger specimens. The specimens that were moist cured demonstrated a very small difference in shrinkage between the two different sized samples. The small and large 24SM pile specimens displayed a large difference in shrinkage rates, with the larger shrinkage occurring

### ACI SHRINKAGE PREDICTION

ACI adopted the Branson expression for shrinkage strain, Eqs. 5 and 6. The hyperbolic expression is based on several studies conducted under controlled environment. The ultimate shrinkage,  $(\epsilon_{sh})_u$ , with a value of  $800 \times 10^{-6}$  mm/mm (in/in) at 40% humidity, is based on the Branson ultimate shrinkage strain at five years [Branson 1977].

For any time  $t$  after age 7 days for moist-cured concrete,

$$(\epsilon_{sh})_t = (t/(35 + t))(\epsilon_{sh})_u \quad (5)$$

For anytime after 1 to 3 days for steam-cured concrete,

$$(\epsilon_{sh})_t = (t/(55 + t))(\epsilon_{sh})_u \quad (6)$$

where,  $(\epsilon_{sh})_t$  = shrinkage strain at anytime  $t$  after the recommended ages

$t$  = time in days after initial curing

$(\epsilon_{sh})_u$  = ultimate shrinkage strains; average value suggested is

$800 \times 10^{-6}$  mm/mm (in/in) at 40% humidity.


ACI Eqs. 2 and 3 were calculated at various concrete ages. The ACI shrinkage model at 365-day age predicts a shrinkage of about  $534 \times 10^{-6}$  and  $565 \times 10^{-6}$  for steam curing and moist curing, respectively, as expected. Most of the 356 mm (14 in) pile specimens displayed a shrinkage strain between  $500-1000 \times 10^{-6}$ , well above the ACI prediction. The 356 mm (14 in.) moist cured specimens showed a strain of about  $500 \times 10^{-6}$  at 365 days, slightly less than the ACI prediction. For the 610 mm (24 in.) piles, the 365-day shrinkage was  $550-650 \times 10^{-6}$ , close to the ACI prediction. The moist cured 610 mm (24 in.) pile samples showed 365-day shrinkage that was very close to the ACI prediction.




**FIGURE 6 Piles with Embedded Metal Plates**



**FIGURE 7 Micrometer Measurement of Embedded Plate Distance**

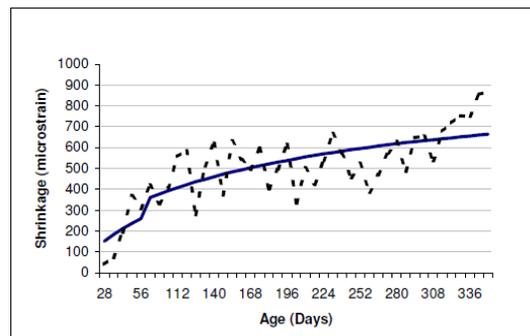


(a) 12SM Specimens

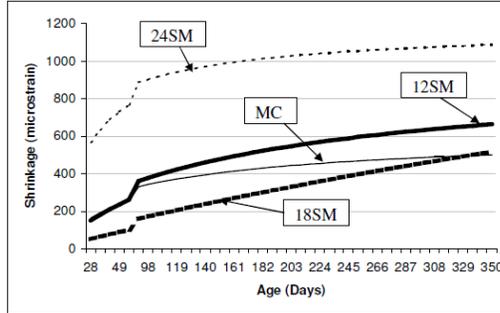


(b) Best-Fit Shrinkage Trend Lines for Small Pile Samples

**FIGURE 8 Shrinkage Results for Small Piles**

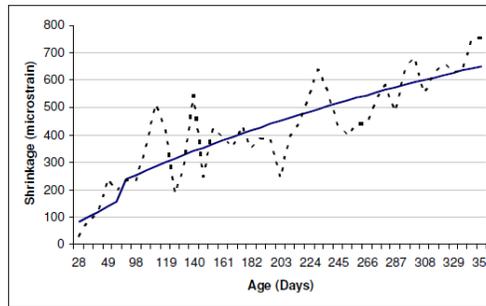

(a) 12SM Specimens

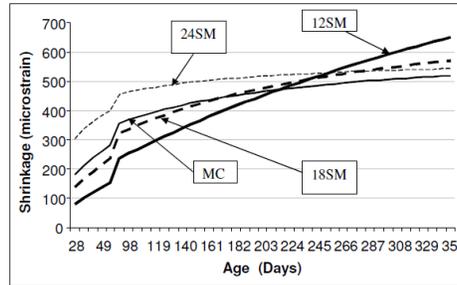

(b) Best-Fit Shrinkage Trend Lines

**FIGURE 9 Shrinkage Results for Large Piles**

## CONCLUSIONS

The following conclusions may be made based on the findings of this study:

1. Steam curing of silica fume precast concrete elements can be conveniently achieved with the present day technology and facilities available in large precast yards. This study has shown that it is easily possible to meet and even exceed the FDOT specifications regarding the temperature regimens during steam curing.
2. Steam cured silica fume concrete can achieve the target minimum compressive strengths, as specified in the FDOT specifications. In this study, all steam cured pile specimens reached the 28-day target strength of 41.37 MPa (6,000 psi) for the Class V mixes. All steam cured samples continued to gain in strength with time. At 365 day

age, the samples displayed significantly higher compressive strengths than the 28-day strengths.

3. The steam cured samples displayed lower compressive strengths at all ages than their moist cured counterparts. This is consistent with previous research finding on silica fume concrete [Holland 1989].
4. Steam curing times of 12, 18 and 24 hours do not seem to play a major role in controlling concrete compressive strengths. There was no consistent pattern of maximum strength displayed by samples from a single source of steam curing duration.
5. All steam cured and moist cured specimens showed a general increase in shrinkage with time. The steam curing duration did not seem to play a major role in affecting the shrinkage rates. At later stages, such as 364 day age, the longer steam curing periods such as 18 and 24 hours accelerated the shrinkage growth.
6. Size of the pile specimens did not have a significant effect on the shrinkage rate. The larger and the smaller pile samples underwent similar shrinkage with time.
7. During the 364 days of monitoring, no distress of the prestressed piles was observed due to shrinkage cracking. Visual inspections did not show any shrinkage cracks.
8. The ACI Branson model for shrinkage prediction under-predicts the shrinkage of steam cured specimens at 364 days, and over-predicts for the moist cured specimens.
9. Precast yards may adopt a 12 – 24 hour period of steam curing for silica fume concrete elements. Typical current steam curing duration used by precasters is 10 – 18 hours.
10. It is recommended that FDOT continue the practice of 72 hours continuous total curing of silica fume concrete products. This means that the balance of the 72 hour requirement after the end of the steam curing time will be used for moist curing. The moist curing may be achieved through curing blankets or curing compound application.

## **ACKNOWLEDGEMENT**

The study reported herein was performed under a research grant from FDOT. The technical assistance received from Mr. Ghulam Mujtaba, Mr. Mike Bergin and Mr. Charles Ishee of the FDOT Materials Laboratory in Gainesville, FL, is gratefully acknowledged.

## **REFERENCES**

- ACI Committee 234 Report. "Guide for the Use of Silica Fume in Concrete," *ACI Manual of Concrete Practice: Materials and General Properties of Concrete (Part 1)*: 234R1 – 234R51 (1997). American Concrete Institute. Farmington Hills, MI.
- ACI Committee 363 Report. "High Strength Concrete," *ACI Manual of Concrete Practice: Materials and General Properties of Concrete (Part 1)*: 363R1 - 363R55 (1997). American Concrete Institute, Farmington Hills, MI.
- ACI Committee 517.2 Report. "Accelerated Curing of Concrete at Atmospheric Pressure – State of the Art." *ACI Manual of Concrete Practice*. American Concrete Institute (1992). Farmington Hills, MI.
- ASTM. Designation: C 39. Standard Test Method for Compressive Strength of Cylindrical Concrete Specimens. Philadelphia, PA (2003).
- ASTM. Designation: C 128. Standard Test Method for Density, Relative Density (Specific Gravity), and Absorption of Fine Aggregate. Philadelphia, PA (1997).
- ASTM. Designation: C 143. Standard Test Method for Slump of Portland Cement Concrete. Philadelphia, PA (2003).
- ASTM. Designation: C 157. Standard Test Method for Length Change of Hardened

- Hydraulic Cement Mortar and Concrete. Philadelphia, PA (2003).
- ASTM. Designation: C 173. Standard Test Method for Air Content of Freshly Mixed Concrete by the Volumetric Method. Philadelphia, PA (2003).
- ASTM. Designation: C 192. Standard Practice for Making and Curing Concrete Test Specimens in the Laboratory. Philadelphia, PA (2001).
- ASTM. Designation: C 403. Standard Test Method for Time of Setting of Concrete Mixtures by Penetration Resistance. Philadelphia, PA (1999).
- ASTM. Designation: C 490. Standard Practice for Use of Apparatus for the Determination of *Length Change of Hardened Cement Paste, Mortar, and Concrete*. Philadelphia, PA (2000).
- ASTM. Designation: C 684. Standard Test Method for Making, Accelerated Curing, and Testing Concrete Compression Test Specimens. Philadelphia, PA (1999).
- ASTM. Designation: C 1064. Standard Test Method for Temperature of Freshly Mixed Portland Cement Concrete. Philadelphia, PA (1999).
- ASTM. Designation: C 1202. Standard Test Method for Electrical Indication of Concrete's Ability to Resist Chloride Ion Penetration. Philadelphia, PA (1997).
- ASTM. Designation: C 1240. Standard Specification for Silica Fume for Use as a Mineral Admixture in Hydraulic Cement Concrete, Mortar, and Grout. Philadelphia, PA (2003).
- Ayers, M.E. and Khan, M.S. "Overview of Fly Ash and Silica Fume Concrete: The Need for Rational Curing Standards." Proceedings of V. Mohan Malhotra Symposium, "Concrete Technology: Past, Present, and Future," SP-144, pp. 605-622. Farmington Hills, MI (1994).
- Branson, D.E. *Deformation of Concrete Structures*. New York: McGraw-Hill International Book Co. (1977).
- Cement Association of Canada. "Autoclave Steam Curing and Atmospheric Steam Curing." (2004).
- Chini, A.R., Muszynski, L.C., and Hicks, J. and "Determination of Acceptance Permeability Characteristics for Performance-Related Specifications for Portland Cement Concrete." *Florida Department of Transportation Research* No. BC 354-41. Florida: University of Florida (2003).
- Florida Department of Transportation. "Standard Specifications for Road and Bridge Construction." Tallahassee, Florida. (2004).
- Holland, T.C. "Working with Silica Fume in Ready-Mixed Concrete: U.S.A Experience." *Proceedings*, 3<sup>rd</sup> International Conference, Fly Ash, Silica Fume, Slag, and Natural Pozzolans in Concrete, SP-114, Vol. 2, pp. 763-781. Farmington Hills, MI (1989).
- Kosmatka, S.H. and Panarese, W.C. *Design and Control of Concrete Mixtures*. 13<sup>th</sup> e.d. Portland Cement Association, 1994.
- Nawy, E. G.. "Reinforced Concrete: A Fundamental Approach", Pearson Prentice-Hall, 2009.
- Ozyildirim, C. "Concrete Bridge-Deck Overlays Containing Silica Fume," CANMET/ACI International Workshop on the Use of Silica Fume in Concrete, April 7- 9, 1991, Washington, DC, V.M. Malhotra, Ed., pp. 305-312.
- PCI Committee on Durability. "Guide to Using Silica Fume in Precast/Prestressed Concrete Products." *PCI Journal* 39 (1994): 36-46.
- Scali, M.J., Chin, D., and Berke, N.S. "Effect of Microsilica and Fly Ash upon the Microstructure and Permeability of Concrete." *Proceedings*, 9<sup>th</sup> International Conference on Cement Microscopy, pp. 375-387. Duncanville, TX: International Cement Microscopy Association (1987).
- Thelend, D. "The Make-or-Break Process: With and Eye on the Bottom Line, the Producer Increasingly is Trying to Optimize the Curing Process." *The Concrete Producer* July 2003.